

BINMASTER®


Taking Control . . . To A Higher Level

Suredrop Cable Release System

Assembly Instructions

Assemble the suredrop cable release system in the order as shown in the figure below.

- 1) Ball Stop.
- 2) Round Crimp
- 3) Ball Stop
- 4) Cap
- 5) Ball Stop
- 6) Oval Crimp
- 7) Thimble
- 8) Cable

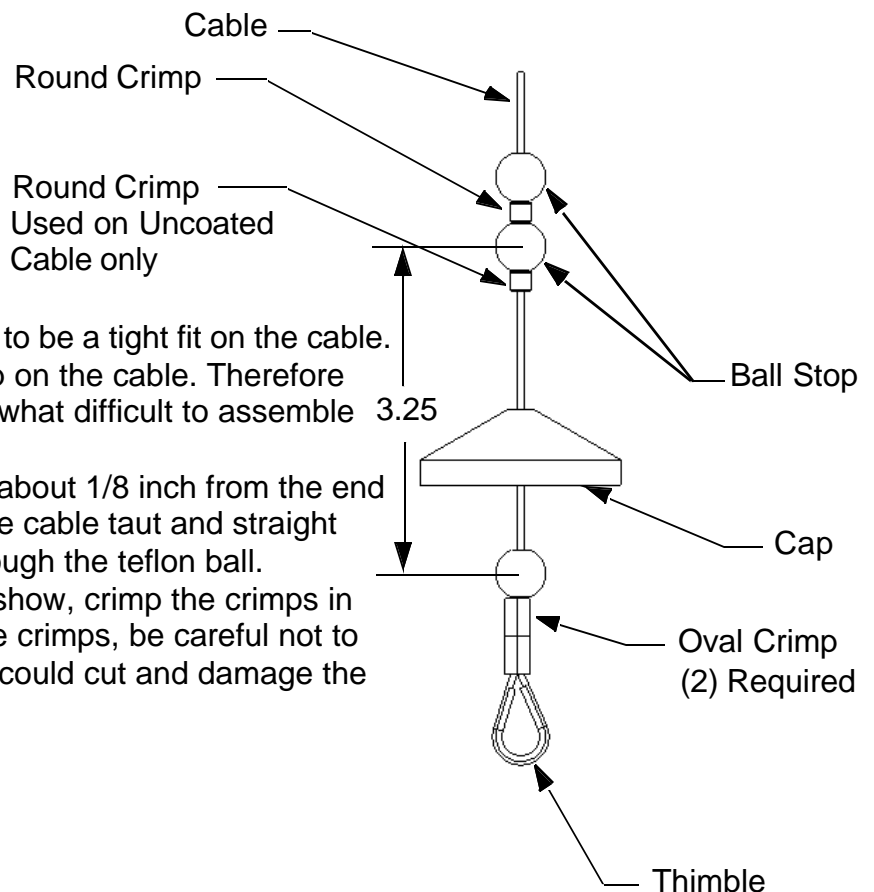

The Teflon balls are designed to be a tight fit on the cable. This is so the balls will not slip on the cable. Therefore the Teflon balls may be somewhat difficult to assemble onto the cable.

Using a pliers, hold the cable about 1/8 inch from the end of the cable. This will keep the cable taut and straight while you press the cable through the teflon ball.

After all items are located as show, crimp the crimps in place. When compressing the crimps, be careful not to over tighten. Over tightening could cut and damage the cable.

BINMASTER®

Division of Garner Industries
7201 No. 98th Street P. O. Box 29709
Lincoln, NE 68507 Lincoln, NE 68529
(402) 434-9102 Fax (402)434-9133
www.binmaster.com

Distribué par :



2 rue René Laennec 51500 Taissy France
Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

Email : hvssystem@hvssystem.com
Site web : www.hvssystem.com